



Menu Button

Long press "Menu" button on the controller, then it will enter into camera menu; Zoom Tele Wide to control the camera menu.

Power Button

Long press to power on / off the joystick controller and the camera.

Color Button


Short press to change the color palettes or color polarity of the thermal image. (only available in 640 thermal resolution camera models)

Scene Button

Short press to switch among MOB mode (Man Over Board), night mode, Day mode, Docking mode.

Home Button

Short press to move camera to home position;
Long press to save current position as Home Position.

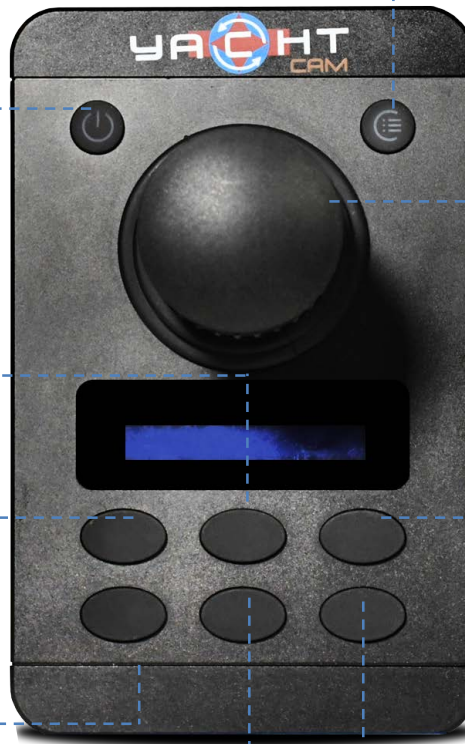

Joystick

To Control Camera

Twist joystick leftwards to zoom out, twist joystick rightwards to zoom in;
Move joystick up / down to tilt up / down camera;
Move joystick left / right to pan left / right camera

Camera Button

Short press to switch between the daytime camera and the thermal images camera.

A-WATCH (anchor watch)

Short press – 360-degree continuous automatic scan
Long press - switch to manual focus mode.
twist joystick to focus near / far.

F-SCAN (Forward scan)

Short press - 45-degree automatic scan

22.5 degree right from Home point, Home point, 22.5 degree left from home point.

Long press – Adjust DNR (Digital noise reduction)

Adjust DNR (off to 1, 2, 3, 5)