



Menu Button

Long press "Menu" button on the controller, then it will enter into camera menu; Zoom Tele Wide to control the camera menu.

Power Button

Long press to power on / off the joystick controller and the camera.

D/N Button


Short press to switch among camera image in color mode (Day) and B/W (black/white) mode (Night)

Lights Button

Short press to switch among short distance lights (if camera zoomed to less than 5 times) or long distance lights (if camera zoomed to more than 5 times) and lights off.

Home Button

Short press to move camera to home position;
Long press to save current position as Home Position.

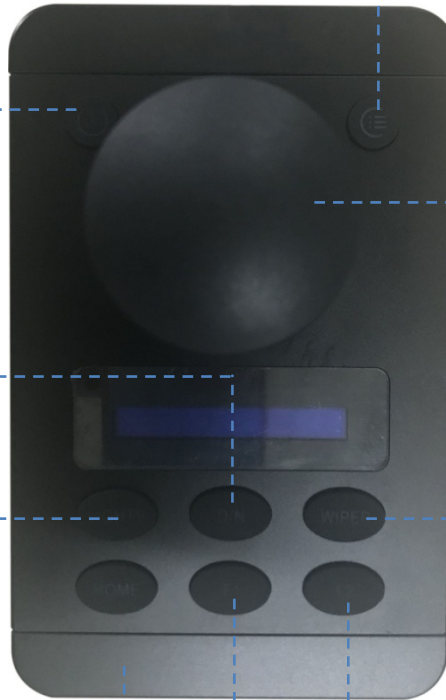

Joystick

To Control Camera

Twist joystick leftwards to zoom out, twist joystick rightwards to zoom in;
Move joystick up / down to tilt up / down camera;
Move joystick left / right to pan left / right camera

Wiper Button

Short press to switch among fast speed wiper, normal speed wiper and wiper off

A-WATCH (anchor watch)

Short press – 360-degree continuous automatic scan
Long press - switch to manual focus mode.
twist joystick to focus near / far.

F-SCAN (Forward scan)

Short press - 45-degree automatic scan

22.5 degree right from Home point, Home point, 22.5 degree left from home point.

Long press – Adjust DNR (Digital noise reduction)

Adjust DNR (off to 1, 2, 3, 5)